


Please see the Operator's Guide for full details of setup and operation


**1** Set up both signal heads, cones and signs according to highway regulations.

**2** Measure the distance in the shuttle lane between the two WAIT HERE signs.

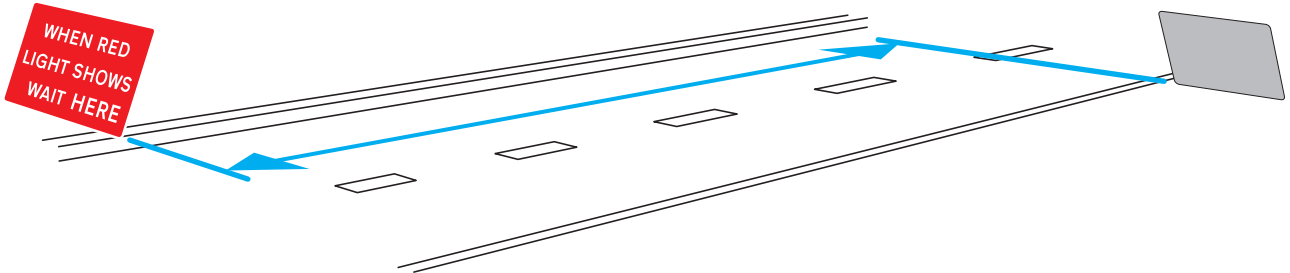

**3** On the SLAVE XL controller:

**a** Switch on the controller.

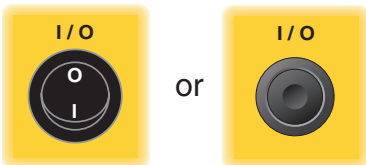

**b** Press to choose XL TWO PHASE.

```
PLEASE SELECT ONE
OF THE FOLLOWING
XL TWO PHASE ←
MULTIPHASE
```

**c** Either: Press to configure settings,  
or

Press to resume the last mode in which the controller was used (only if it was previously used as a slave). Go to step **f**

```
FOR LAST MODE/SET UP
TIMES PRESS ENTER ⇐
FOR NEW MODE/SET UP
TIMES PRESS SCROLL ↓
```



Look for a flashing amber indicator on the mimics. If previously used as **master**, the **M** mimic will flash; if last used as a **slave**, the **S** mimic will flash.



**d** Use to highlight the required radio channel and press to proceed.

```
SELECT RADIO CHANNEL
1-2
SCROLL ↑↓
ENTER ⇐ TO SELECT
```

**e** Use (if necessary) to highlight the SLAVE UNIT option and press to proceed.

```
MASTER UNIT
SLAVE UNIT ←
SCROLL ↑↓
ENTER ⇐ TO SELECT
```

**f** The slave controller will now await contact from the master controller. No signals will be shown at this stage.


```
SLAVE xxxxxx CHAN x
AWAITING DATA FROM
MASTER
ENTER ⇐ TO CANCEL
```

*Note: Ensure that the master controller uses the same channel number as the slave (as shown in the top right corner of the slave standby screen).*

Now set up the MASTER XL controller

**4 On the MASTER XL controller:**

**a** Switch on the controller.

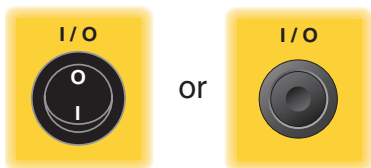

**b** Press to choose XL TWO PHASE.

```
PLEASE SELECT ONE
OF THE FOLLOWING
XL TWO PHASE ←
MULTIPHASE
```

**c** Either: Press to configure settings,  
or

Press to resume the last mode in which the controller was used (only if it was previously used as a master). Go to step **g**

```
FOR LAST MODE/SET UP
TIMES PRESS ENTER ⇐
FOR NEW MODE/SET UP
TIMES PRESS SCROLL ↓
```

**d** Use to highlight the required radio channel and press . The channel must match the slave's setting.

```
SELECT RADIO CHANNEL
1-2
SCROLL ↑↓
ENTER ⇐ TO SELECT
```

**e** Use (if necessary) to highlight the MASTER UNIT option and press .

```
MASTER UNIT ←
SLAVE UNIT
SCROLL ↑↓
ENTER ⇐ TO SELECT
```

**f** Use (if necessary) to change between the four operation modes: VEHICLE DETECT MODE, FIXED TIME MODE, ALL RED MODE or MANUAL MODE

```
VEHICLE DETECT MODE
SCROLL ↑↓ FOR MORE
ENTER ⇐ TO SELECT
```

**g** The screen will show a preview of all current settings:

```
VEHCL MODE SELECTED
RED MR 05s GN MR 15s
RED SL 05s GN SL 15s
⇐⇐ TO RUN ↑ TO ALTER
```

If the settings are all correct, press to begin running, or

If any timings need to be changed, press

```
ALL RED - MASTER
0-2-5-10-15-20-25-30
40-50 SCROLL ↑↓
THEN ENTER ⇐
```

```
MAX GREEN - MASTER
15-20-25-30-35-40-45
50-60 SCROLL ↑↓
THEN ENTER ⇐
```

```
ALL RED - SLAVE
0-2-5-10-15-20-25-30
40-50 SCROLL ↑↓
THEN ENTER ⇐
```

```
MAX GREEN - SLAVE
15-20-25-30-35-40-45
50-60 SCROLL ↑↓
THEN ENTER ⇐
```

to highlight a time.

to set the chosen time and proceed to the next screen.

**To determine the appropriate timings**

Use the tables below to convert the distance between the shuttle lane WAIT HERE signs into appropriate timings.

**ALL RED time**



*Note: On steep gradients, increase the ALL RED time by 5 seconds for the uphill phase.*

**MAXIMUM GREEN time**

